

## To replace the batteries:

1. Make sure that the power switch is in the OFF position.
2. Press in on both sides of the SL-10L case as illustrated by the two arrows in Fig. C to release the internal tabs. The tab can be seen in Fig. D.
3. Pull the case apart gently.  
Note: The case is still joined at the bottom.
4. To separate the bottom, work the case back and forth until it is freed from the shoe mount.
5. Replace the batteries.
6. Snap the case back together.



Fig. C

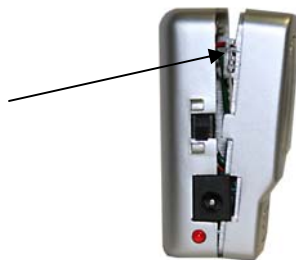


Fig. D

## 90 Day Limited Warranty

Sima Products warrants this product against defects in materials and workmanship for a period of 90 days from the date of retail purchase. During the warranty period, the product will be repaired or replaced, at Sima's option. You can register your product online at [www.simacorp.com](http://www.simacorp.com)

### Conditions

Ship your unit, freight pre-paid, including reasonable proof of date and place of purchase and description of problem to:

**Attn: Customer Service  
c/o Sima Products  
Bldg. #5  
140 Pennsylvania Ave.  
Oakmont, PA 15139**

This warranty is void if any defects are caused by abuse, misuse, negligence or unauthorized repairs. All liability for incidental or consequential damages is specifically excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal right and you may also have other rights which vary from state to state.

# **sima**®

## **LED**

### **Video Light for Digital Cameras & Camcorders**



**Powerful White LED Technology  
Model SL-10L**

Register online at [www.simacorp.com](http://www.simacorp.com)

## Introduction

The Sima LED Universal Video Light Model SL-10L can be mounted on the accessory shoe of any camcorder by sliding it into place and tightening the mounting screw. If your camcorder does not have a shoe mount, the Sima Video Bracket, (Model SVB-1) can provide a mounting platform.

## Batteries:

The SL-10L comes with two rechargeable AAA NiMH batteries. The batteries come pre-installed from the manufacturer. Prior to use, the batteries must be charged 8 to 10 hrs. Use the supplied AC adapter/charger to charge the batteries.

**Note:** Because of the long lifetime of NiMH batteries, they should not need to be replaced. In case of replacement please refer to (Fig.C) & (Fig.D).

## To charge the batteries:

1. Insert the jack on the power cord into the power input jack on the side of the SL-10L (Fig. A). Red LED indicator light, located below the power jack, will turn on.
2. Plug AC transformer into standard 120 VAC wall outlet.
3. Batteries must charge 8 to 10 hours before fully charged.  
*Note: indicator light will not turn off when charging is complete.*
4. Fully charged batteries will provide approx. 60 to 90 minutes continuous run time.

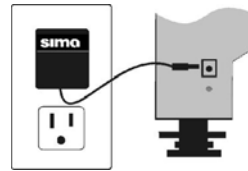


Fig. A

**Note:** Light does not work with AC adapter plugged in unit's power jack.

**Warning!** Do not overcharge. Unplug after 8-10 hours charging.

## Special Notes:

The SL-10L video light can also be operated with two standard AAA alkaline batteries. Running time will be less than when using the rechargeable NiMH batteries included with your unit. **If using non-rechargeable batteries, do not use AC charger.** Supplying current to non-rechargeable batteries can cause them to leak or explode and may damage the unit.

**Warning!** Never charge alkaline batteries. Damage to AC charger or light can occur.

## Operation:

Turn light on by sliding the on/off switch up to the ON position as shown in Fig. B



Fig. B

## Specifications:

**LEDs:** ~6000K Color Balanced

**Power:** 2 AAA NiMH batteries

**Run Time:** 60 to 90 Minutes depending on battery usage.

**Battery Type:** 600 mA hour NiMH

**Charger:** 120V AC input; 3V DC output

**Weight:** 1.9oz (with batteries).

**Size:** 2.35" x 1.5" x 1"