



# Quick Start Guide for Operation of the WX-67 First Alert Weather Radio

Front view

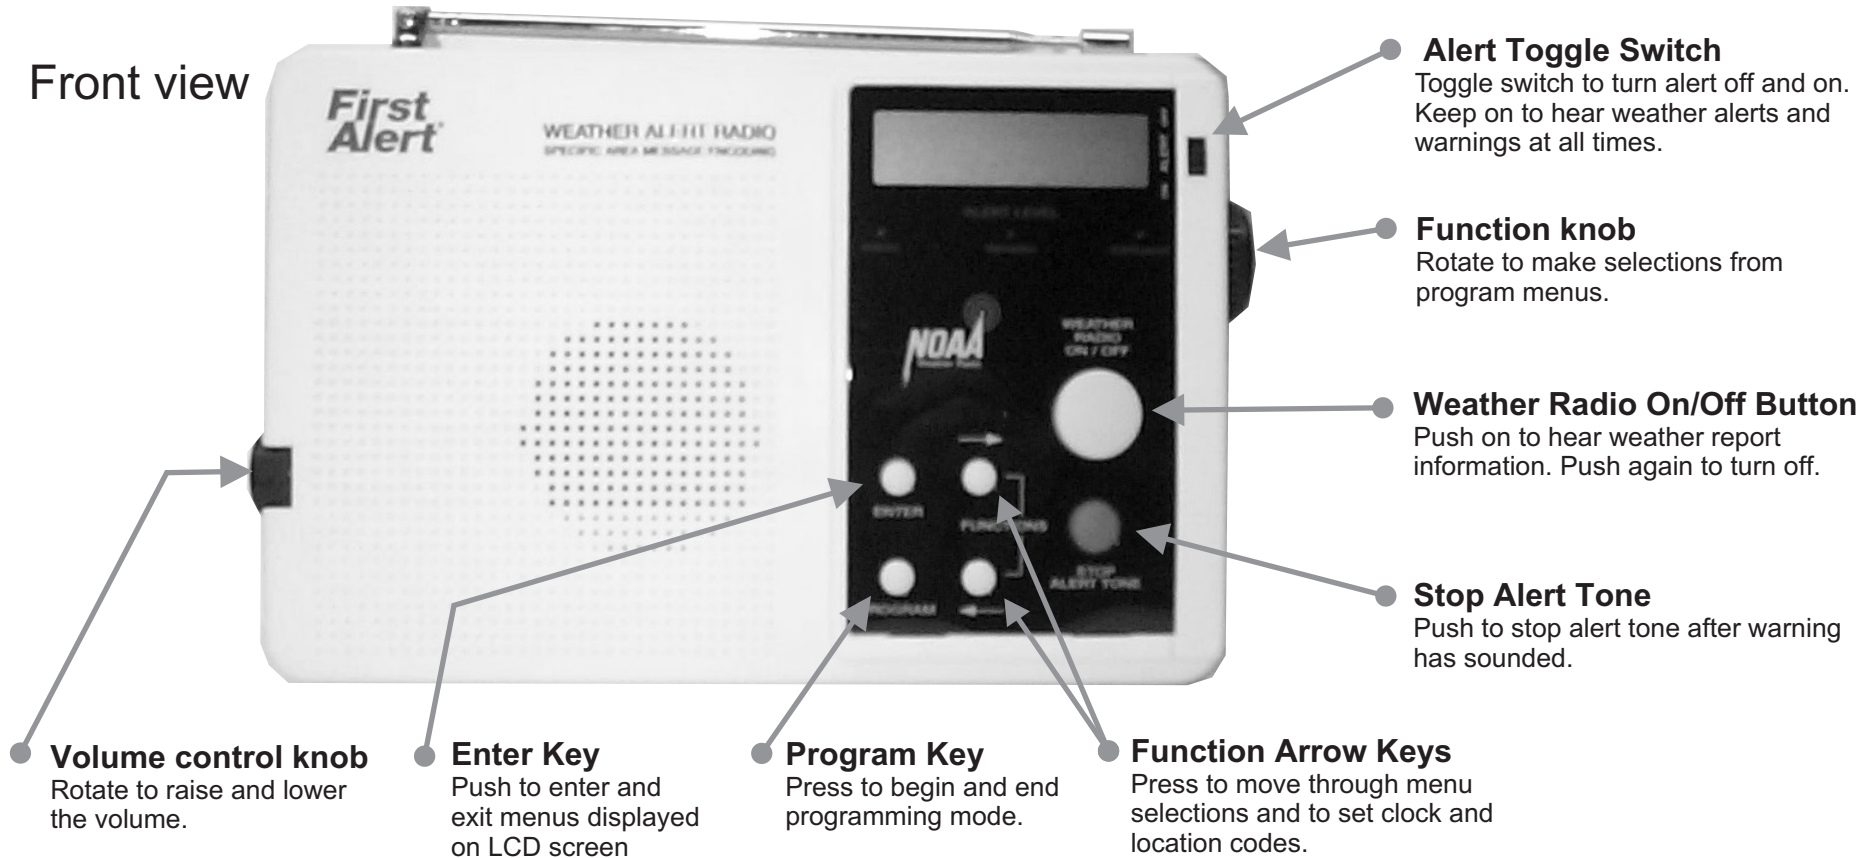

Rear view

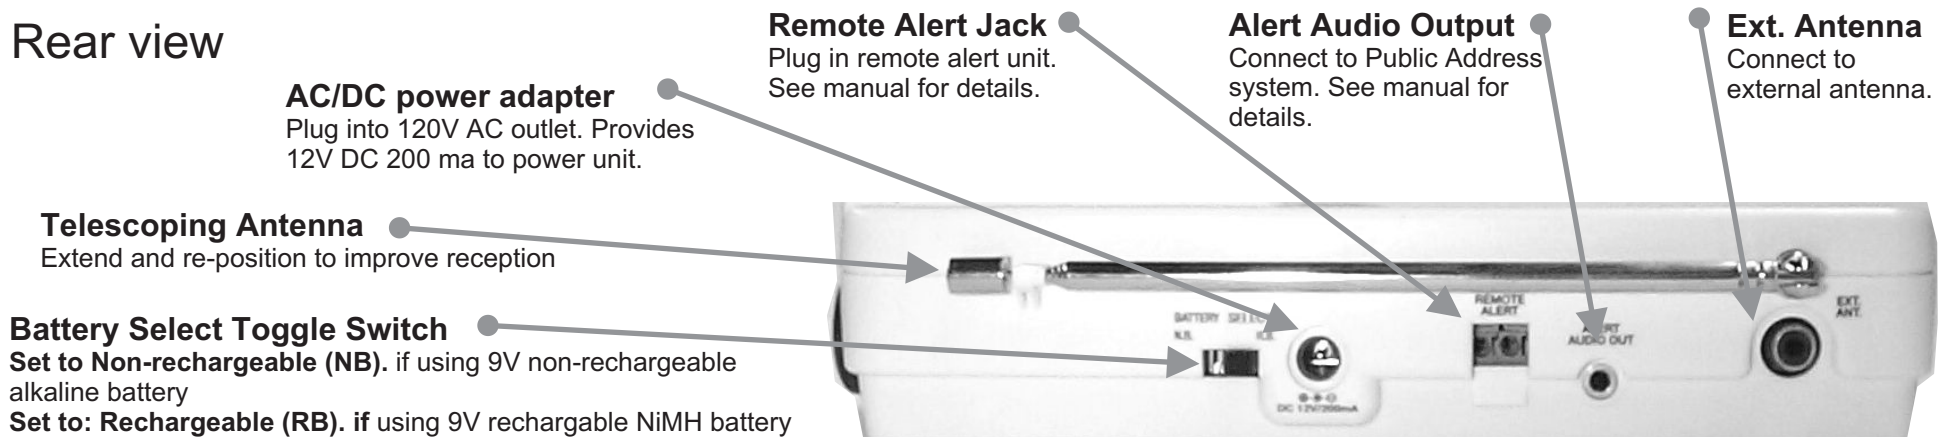

(over)

# Quick and Easy Programming of the First Alert WX-67 for maximum emergency alert protection

## Setting the Clock

1. Press the **Program button**
2. Press the **Right Arrow Key** 4 times. "Setting Clock" will appear in LCD window.
3. Press the **Enter** button.
4. Time will appear in LCD window. Minutes will begin flashing. Set the proper minutes using the **Function Knob** to scroll up or down.
5. Press the **Right Arrow Key** to select hours. Set the proper hours using the **Function Knob**. *AM & PM will change automatically.*
6. Press **Enter**. Clock is now set.
7. Press **Program button** to return radio to normal operation.

## Setting the Channel

**NOAA broadcasts on 7 channels. Follow the steps below to select the best channel for your area**

1. Press the **On/Off button** to turn the radio on. Adjust Volume to your preference.
2. Press the **Program button** once. "Channel Select" will appear in LCD window.
3. Press the **Enter** button.
4. Use the **Function Knob** to select the correct channel in your area. \* See note below.
5. Press the **Enter button**. **The area channel is now set.**
6. Press the **Program button** to return to normal operation.

## Setting the universal alarm code

This radio is pre-programmed to receive all alarms within its range. The universal alarm code is 999999. To verify or set the universal code:

1. Press the **Program button**.
2. Press the **Right Arrow Key** 3 times. "Enter Loc Code" will appear in the LCD window.
3. Press the **Enter button**. "Loc 1" followed by 999999 will flash in the LCD window. If so, go to step 8. If not, continue.
4. Press the **Enter button** again. The first two digits in the code will begin to flash.
5. Use the **Function Knob** to set the two digits to 99.
6. Press the **Right Arrow button** to select the next two digit set. Repeat step 5.
7. Repeat steps 5 & 6 to complete the code. Press the "Enter" button to save.
8. Press the **Program button** to return to normal operation.

## Advanced programming

### Setting specific county (SAME) codes

A 6-digit code identifies each county. You must set the county codes two digits at a time. To set the code for your county:

1. Press the **Program button** once.
2. Press the **Right Arrow key** 3 times. "Enter Loc Code" will appear in the LCD window and begin flashing.
3. Press the **Enter button**.
4. "Loc 1" followed by a 6-digit number will flash in the LCD window.
5. To change this number to your code, press **Enter** again. The first two digits will begin to flash.
6. Turn the **Function Knob** to select the first two numbers of the code you want to enter.
7. Press the **Right arrow key**. The next two digits will begin to flash
8. Use the **Function Knob** to select the next two digits of your code.
9. Press the **Right arrow key**. The last two digits will begin to flash. Use the **Function Knob** to select the last two digits of your code.
10. Press the **Enter button** to save the code
11. Press the **Program button** to return to normal operation

\* If you are not sure which channel or local code to set your weather radio to, call NOAA at 1-888-697-7263 (SAME) or visit their website at: <http://www.nws.noaa.gov.nwr/indexnw.htm>.