


## MZM-1 Mini Zoom Mic Instruction sheet

To operate the MZM-1:

1. Install 1 AAA battery (as shown below.)
2. Slide the rubber insulated shoe mount onto the camcorder and tighten by turning the adjusting wheel clockwise.
3. Plug the audio jack into the mic input of your camcorder.
3. Turn the microphone on by sliding the setting switch from the OFF position to the NORM position.
4. To increase the zoom listening profile of the MZM-1 move the setting switch to the ZOOM position.
5. To save battery life, turn the switch to OFF when finished using.

**Battery Installation:** The MZM-1 zoom microphone requires 1 AAA battery. To insert the battery:

1. Unscrew the knob on the end of the microphone.
2. Remove the battery cover as shown.
3. Insert battery according to polarity markings in the battery compartment.
4. Replace the battery cover and knob.

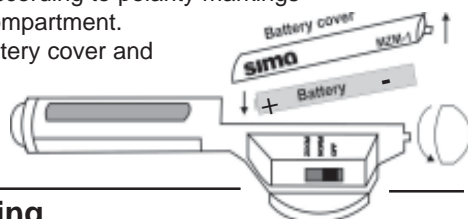

## Troubleshooting

Problem	Possible Cause and Solution
No audio	* Make sure a fresh AAA battery is installed * Make sure audio jack is plugged into camcorder

## Specifications

**Freq. response:** 100 - 10KHz

**Low impedance electret microphone**

**Battery:** 1 AAA battery. Battery life = 300 hrs.

**Power consumption:** 2mA

**Plug:** 3.5 mm

**Weight:** 30g (w/out battery)

**Effective output level**

Normal: -50 dB unbalanced 0dB =1v/Pa

Zoom: -46dB unbalanced 0dB =1v/Pa

Dynamic Range: 80 dB

## 90 Day Limited Warranty

Sima Products Corp. ("Sima") warrants that if the accompanying product proves to be defective to the original purchaser in material or workmanship within 90 days from the original retail purchase, Sima will, at Sima's option, either repair or replace same without charge (but no cash refund will be made). To enforce this warranty you must deliver, mail or ship the product, together with both the original bill of sale and this limited Warranty statement as proof of warranty coverage to:

Sima Products Corp.  
Att: Customer Service  
140 Pennsylvania Ave. Bldg. #5  
Oakmont, PA 15139

To receive special offers and discounts, register your product online at [www.simacorp.com](http://www.simacorp.com)

### Limitation of Liability and Remedies

Sima shall have no liability for any damages due to lost profits, loss of use or anticipated benefits, or other incidental, consequential, special or punitive damages arising from the use of, or the inability to use, this product, whether arising out of contract, negligence, tort or under any warranty, even if Sima has been advised of the possibility of such damages. Sima's liability for damages in no event shall exceed the amount paid for this product. Sima neither assumes nor authorizes anyone to assume for it any other liabilities. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Copyright 2005 © Sima Products Corp.

140 Pennsylvania Ave. Bldg #5 Oakmont, PA 15139

[www.simacorp.com](http://www.simacorp.com)

800-345-7462

PN21716