

Need additional Video Accessories?



Try **Sima's ST-11K** mini tripod with universal clip! This pocket tripod conveniently provides the support you need for a steady camcorder or cell phone photo shoot. Clip included.

Sima's Cellphone camera disposable lenses, Model SML-3, let you stick and shoot a better photo with your cell phone camera. Choose from Wide, Telephoto and Macro for the best little cell phone pics you've ever seen.



Sima's Mini-Zoom mic, Model MZM-1, lets you zoom in on the audio you want while camcording your favorite events. Weddings, graduations and the holidays never sounded so good.

Register online at www.simacorp.com and receive special offers and discounts



90 Day Limited Warranty

Sima Products warrants this product against defects in materials and workmanship for a period of 90 days from the date of retail purchase. During the warranty period, the product will be repaired or replaced, at Sima's option. You can register your product online at www.simacorp.com

Conditions

Ship your unit, freight pre-paid, including reasonable proof of date and place of purchase and description of problem to:

**Attn: Customer Service
c/o Sima Products
Bldg. #5
140 Pennsylvania Ave.
Oakmont, PA 15139**

This warranty is void if any defects are caused by abuse, misuse, negligence or unauthorized repairs. All liability for incidental or consequential damages is specifically excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal right and you may also have other rights which vary from state to state.

Call 800-345-7462 for information

sima®

50 Lumen Xenon Video Light for Digital Camcorders



Self-powered compact video light Model SL-9X

Register online at www.simacorp.com

Introduction

The Sima Xenon Universal Video Light Model SL-9X can be mounted on the accessory shoe of any camcorder by sliding it into place and tightening the mounting screw. If your camcorder does not have a shoe mount, the Sima Video Bracket, (Model SVB-1) can provide a mounting platform. The SL-9X also comes with a universal clip for use with camera phones.

Batteries.

The SL-9X comes with two rechargeable AAA NiMH batteries. The batteries must be charged 8 to 10 hrs. prior to use. Use the supplied AC adapter/charger to charge the batteries.

Installing the batteries

To install the batteries – slide open the battery compartment located on top of the unit. Insert the two AAA size batteries according to the +/- markings on the unit. Close top.

To charge the batteries:

1. Insert the jack on the power cord into the power input jack on the side of the SL-9 (Fig. A). Red LED indicator light, located below the power jack, will turn on.
2. Plug AC transformer into standard 120 VAC wall outlet.
3. Batteries must charge 8 to 10 hours before fully charged. *Note: indicator light will not turn off when charging is complete.*
4. Fully charged batteries will provide approx. 20 to 25 minutes continuous run time.

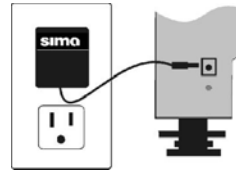


Fig. A

Note: Light does not work with AC adapter plugged in unit's power jack.

Warning! Do not overcharge. Unplug after 8-10 hours charging.

Special Notes

The SL-9X video light can also be operated with two standard AAA alkaline batteries. Running time will be less than when using the rechargeable NiMH batteries included with your unit. If using non-rechargeable batteries, do not use AC charger. Supplying current to non-rechargeable batteries can cause them to leak or explode and may damage the unit.

Warning! Never charge alkaline batteries. Damage to AC charger or light can occur.

Operation:

Turn light on by sliding the on/off switch up to the ON position as shown in Fig. B

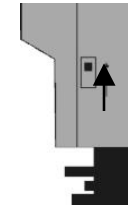


Fig. B

Specifications

Lamp: 3W Xenon lamp

Power: 2 AAA NiMH batteries

Run Time: 20 to 25 min. with 600 mA hour NiMh batteries.

Charger: 120V AC input; 3V DC output

Weight: 2.2 oz. (with batteries).

Size: 2.75" x 1.5"

Replacing the lamp:

Contact Sima at 800-345-7462 for instructions on replacing the lamp.

Note: Touching bulb with bare fingers will damage bulb and cause bulb failure.

© 2005 Sima Products Corporation
P/N 21717

Made in China

Printing instructions:

- Manual is to be printed two-sided in black ink on white paper.
- Size before folding is 4.25" x 11".
- Finished size (after folding) is 2.75" x 4.25".
- Manual is folded so that front cover with Sima logo and picture of SL-9 is showing.
- Manual is to be inserted inside package.